



- ① Construct entire first course of timbers beneath finished grade.
- ② No tie backs in upper two courses or lower three courses of timbers. Stagger tie back location.
- ③ Secure each course with spikes.
- ④ Excavate and place backfill material. Use suitable soil or granular material.

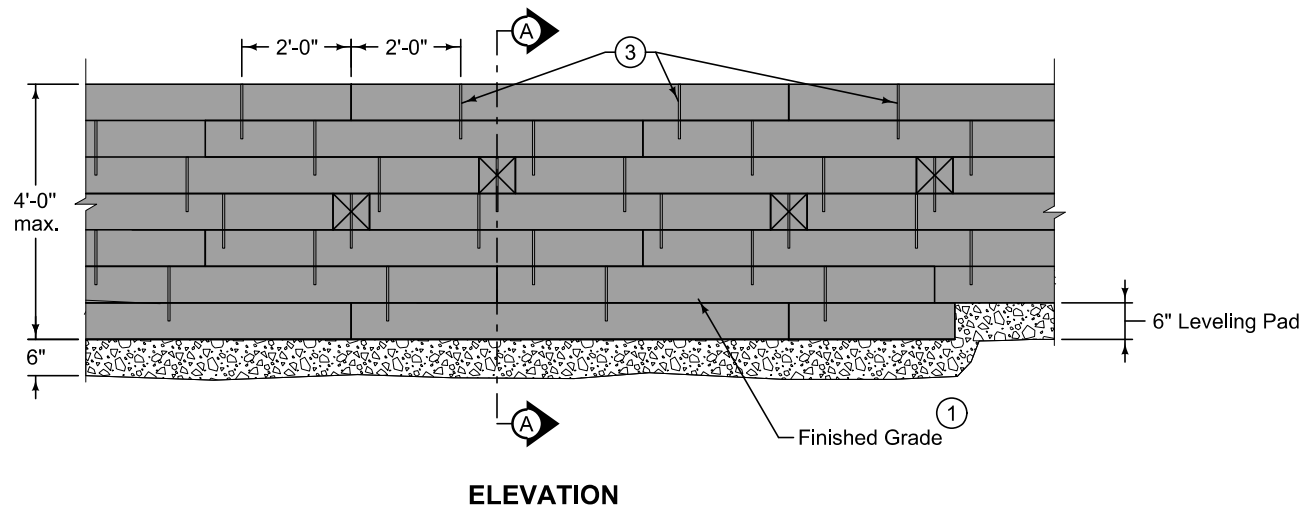

	REVISION New 10-18-11
	SUDAS 9070.101
	SHEET 1 of 1
SUDAS Standard Specifications	
LANDSCAPE TIMBER RETAINING WALL	